



## TP-Link VN020-F2v

### FibreMAX®fone Setup

# Configuration Guide TP-Link VN020-F2v

- Connect to your modem
  Launch a web browser and type in http//tplinkmodem.net or 192.168.1.1
- 3. Follow the step-by-step guide.





#### Step 1. Log into your modem.



Ptp-link		300Mbps Wireless N VolP VDSL/ADSL Modern Router Model No. VN020-F2v
	<u>*</u>	
	Login	
	Copyright () 2019 TP-LINK Technologies Co., Ltd. All rights reserved.	

#### Step 2. Click on **Voice**.

tp-link							300Mbps	Wireless	s N VolP V
	Basic Status								
ode	Device Information								
			Firmwar	e Version:	0.9.1 2.9 v0060.0 E	Build 190627 Rel.	38151n		
			Hardwar	e Version:	VN020-F2v v1 000	00000			
r			System	Up Time:	0 day(s) 00:05:48				
	100000								
twork	DSL								
			Li	ne Status:	Disconnected				
ıgs			DSL Modula	tion Type:	Multimode				
ings			AI	inex type:	Annex A/L				
Settings					Upstream		Downstream	n	
6		Curi	ent Rate (Kbps)	ý (j	0		0		
ntrol		Ma	ax Rate (Kbps)		0		0		
		SN	IR Margin (dB)		0	-	0		
vall		Line	Attenuation (dB	)	0		0		
pel			Errors (Pkts)		0		0		
th Control	inclusion and								
Binding	WAN	12		01	(				
DNS		Name	Connection Type	VPI/VCI or VID	IP/Mask	Gateway	D	NS	Status
	IDVE WAN	lesi-							
5	IF VO WAIN		Connection	VDIA/CLas			1		
		Name	Type	VPI/VCI or	IPv6 Address/I	Prefix Length	Gateway	DNSv6	Status





Ptp-link				300Mbps Wir	eless N VolP VC	SL/ADSL Model	lem Roi No. VN020
atus	SIP Account List						
ick Setup eration Mode	Max of 8 entries can be	configured.					
work	Profile Name	Registrar Address	Phone Number/User ID	Status	Remove	Action	Edit
CP Server	788 - 197		· · · · · · · · · · · · · · · · · · ·			<i></i>	
eless		Add	Select All Deselect All	Remove			
st Network							
ce							
PAccount							
ial Plan							
larmline							
hone Setup							
all Blocks							
all Forward							
dvanced Setup							
peed Dial							
all Log							
SB Voice Mail							
Feature Code Setting							

#### Step 4. Click on **Add**

Ptp-link				300Mbps Wir	eless N VolP VC	SL/ADSL Mod Model	lem Router No. VN020-F2v
Status	SIP Account List						
Quick Setup							
Operation Mode	Max of 8 entries can be o	configured.					
Network	Profile Name	Registrar Address	Phone Number/User ID	Status	Remove	Action	Edit
IPTV							
DHCP Server		Add	Select All Deselect All	Remove			
Wireless							
Guest Network							
Voice							
SIP Account							
Dial Plan							
Warmline							
Phone Setup							
Call Blocks							
Call Forward							
Advanced Setup							
Speed Dial							
Call Log							
USB Voice Mail							
Feature Code Setting							





#### Step 5. Enter the information Provided by FibreMax®

	300Mbps Wireless N VoIP VDS	L/ADSL Modem Router Model No. VN020-F2v
Status	Voice - SIP Account	
Quick Setup		
Operation Mode	SIP Account Basic Settings	
Network	Phone Number/User ID * Registrar Address 0.0.0.0 *	
IPTV	Authentication ID Password	
DHCP Server		Advance +
Wireless		
Guest Network	Save Back	
Voice		
SIP Account.	Phone Number/User ID = Sip User ID as provided	
Dial Plan	Authentication ID = Sip User ID provided	
Warmline	Registrar Address = ipvoice.one	
Phone Setup	Password = Password as provided	
Call Blocks		
Call Forward		
Advanced Setup		
Speed Dial		
Call Log		
USB Voice Mail		
Feature Code Setting		

Click Save