

TP-Link Archer VR1600 AC1600

Configuration Guide.

FTTN/FTTB


Configuration Guide.

TP-Link Archer VR1600 AC1600


1. Connect your computer to the router via a wired or wireless connection.
2. Launch a web browser and type in <http://tplinkmodem.net> or 192.168.1.1
3. The default username and password will be admin and admin.
4. Follow the step-by-step instructions to set up an internet connection.



Step 1.
Enter The default **Username** and **Password (admin and admin)**.

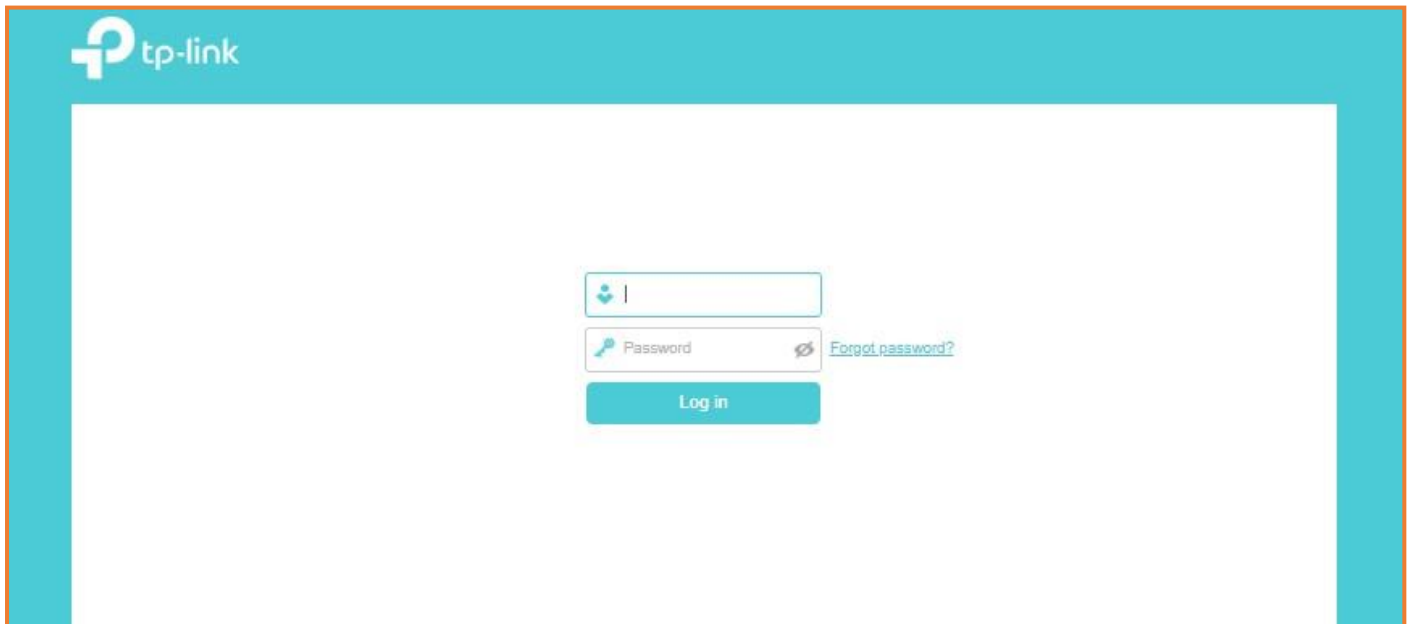


Step 2.
Click on **Advanced**.

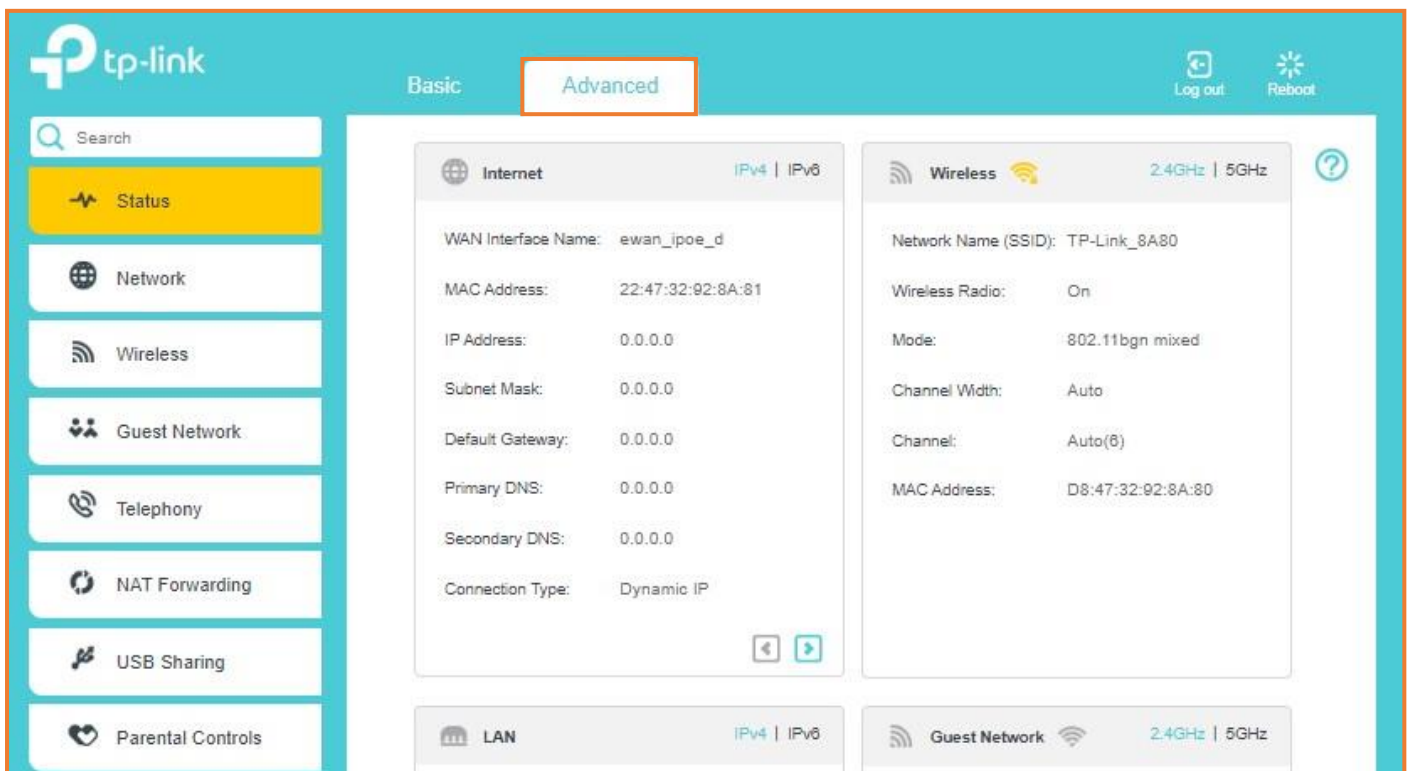


Step 3.
Click on **Networks** > Click on **DSL** > Click on **Delete All**.

Note

(This is to ensure there are no conflicting connections)

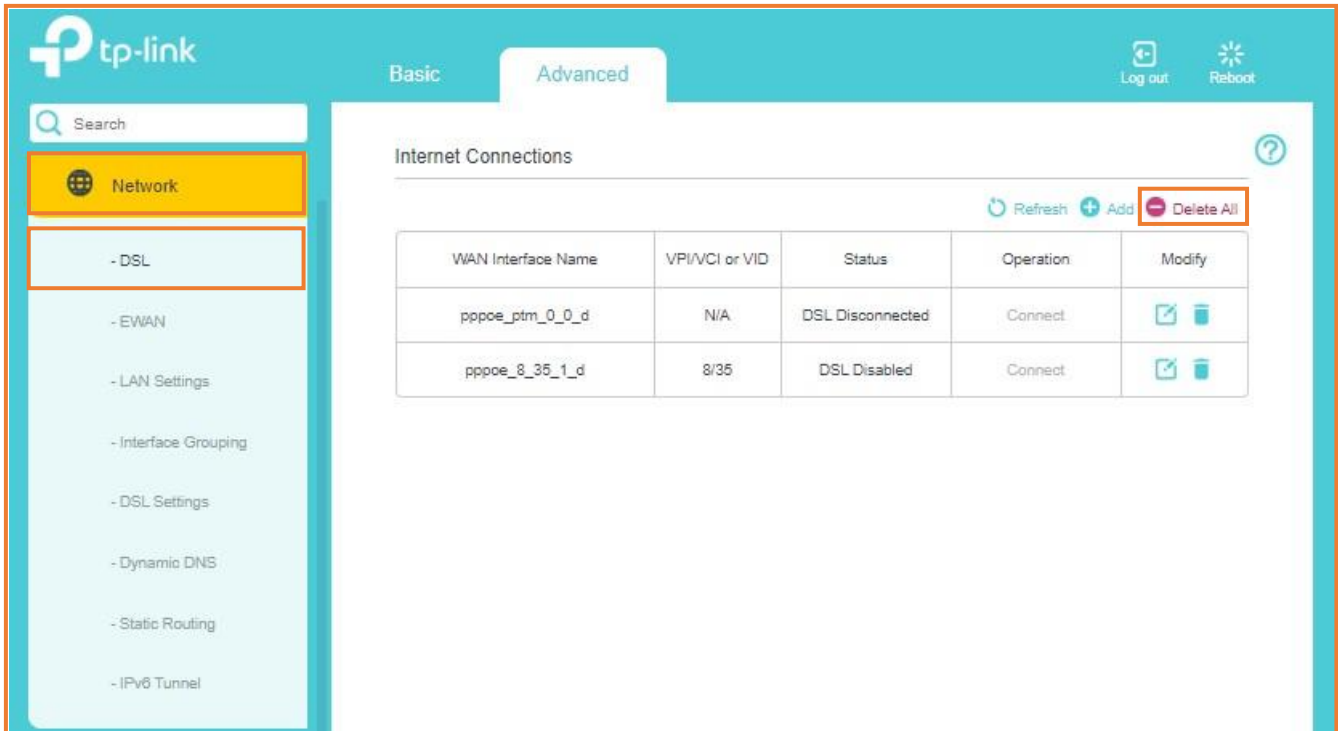


Step 4.
Click on **Add**.

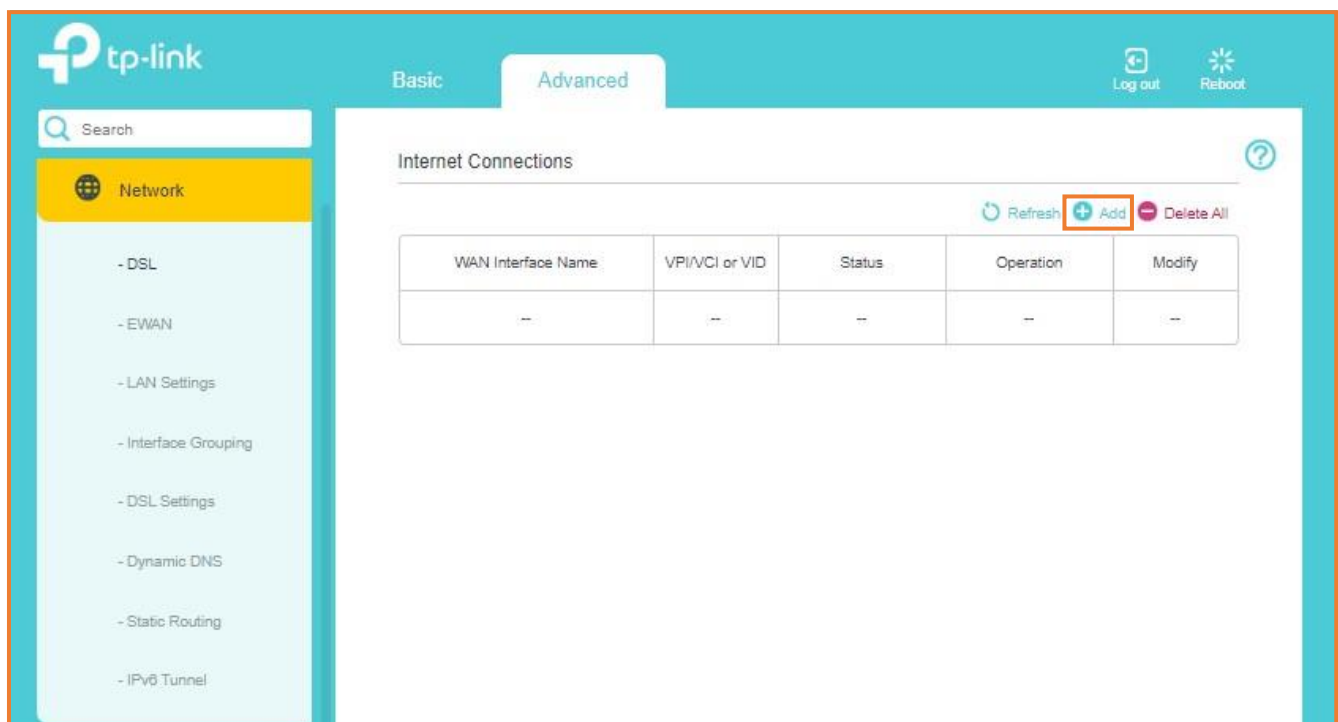

Step 5.
Enter the information provided by FibreMax®.

DSL Modulation Type: **VDSL**
Internet Connection Type: **PPPoE**

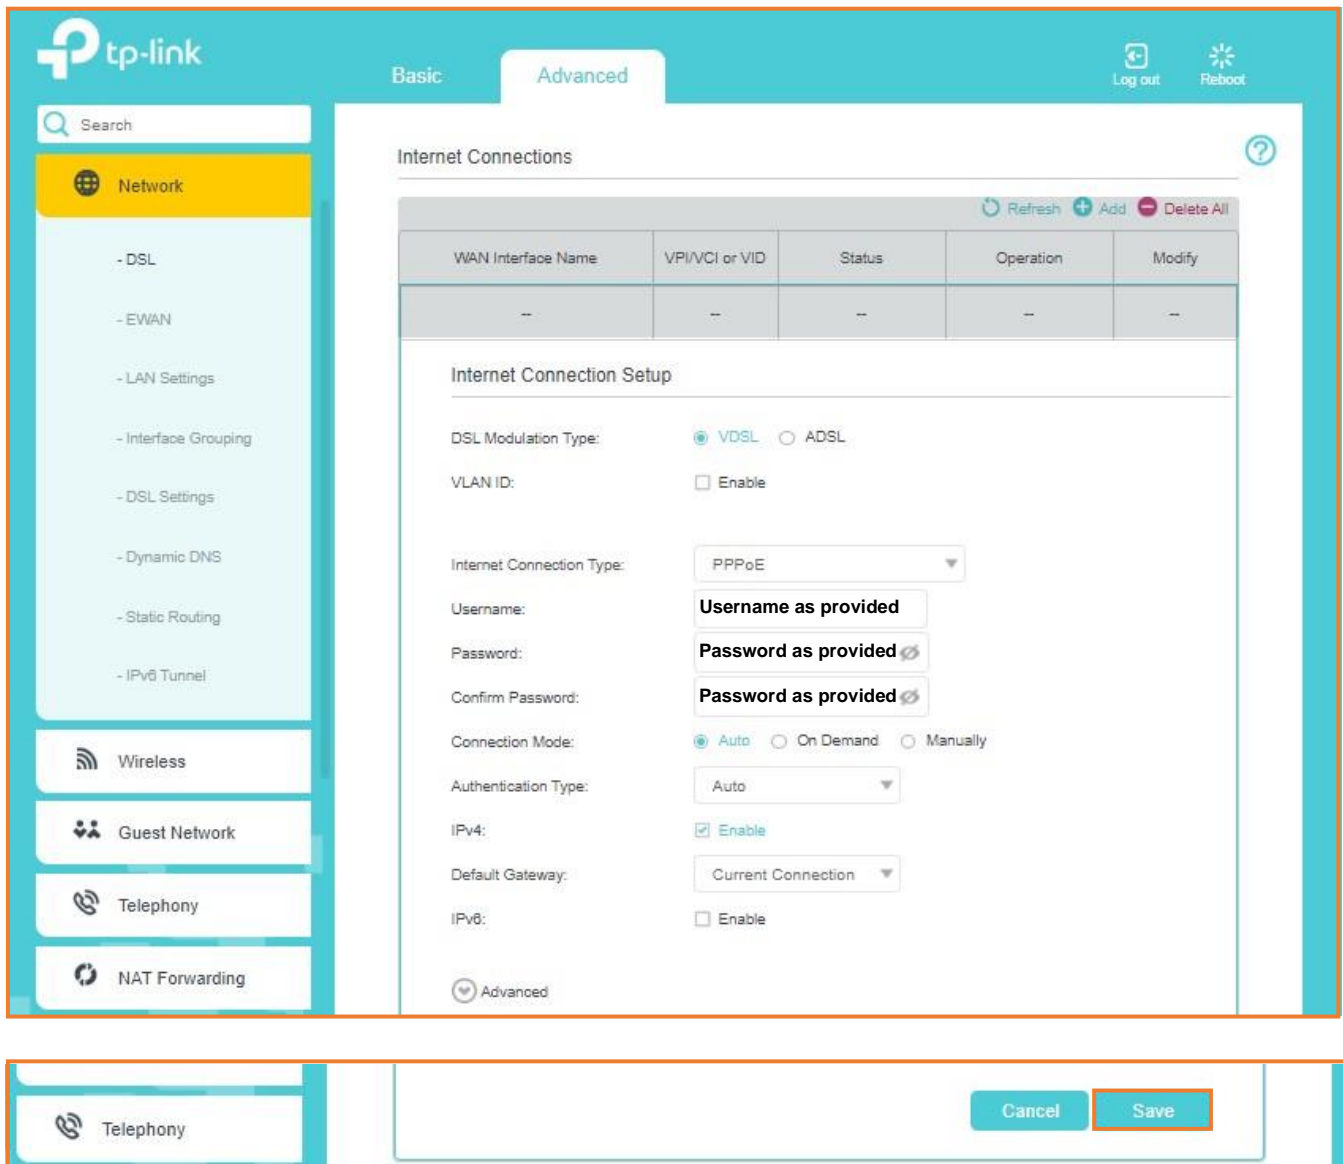

The screenshot shows the TP-Link router's web interface. The 'Advanced' tab is selected. The 'Internet Connections' section is active, displaying a table with columns for WAN Interface Name, VPI/VCI or VID, Status, Operation, and Modify. Below the table, the 'Internet Connection Setup' section is visible. The 'DSL Modulation Type' is set to VDSL (selected with a radio button). The 'Internet Connection Type' is set to PPPoE (selected in a dropdown menu). The 'Username' field contains 'Username as provided', the 'Password' field contains 'Password as provided', and the 'Confirm Password' field contains 'Password as provided'. The 'Connection Mode' is set to Auto (selected with a radio button). The 'Authentication Type' is set to Auto (selected in a dropdown menu). The 'IPv4' checkbox is checked and labeled 'Enable'. The 'Default Gateway' is set to 'Current Connection' (selected in a dropdown menu). The 'IPv6' checkbox is unchecked. At the bottom right of the form, there are 'Cancel' and 'Save' buttons, with the 'Save' button highlighted in orange.

Click **Save**.

Finish!