

TP-Link VC321-G2h AC1600

Configuration Guide.

FTTN/FTTB

Configuration Guide.


TP-Link VC321-G2h

1. Connect your computer to the router via a wired or wireless connection.
2. Launch a web browser and type in <http://tplinkmodem.net> or 192.168.1.1
3. The default username and password will be admin and admin.
4. Follow the step-by-step instructions to set up an internet connection.




Step 1.

Enter the default **Username** and **Password (admin and admin)**

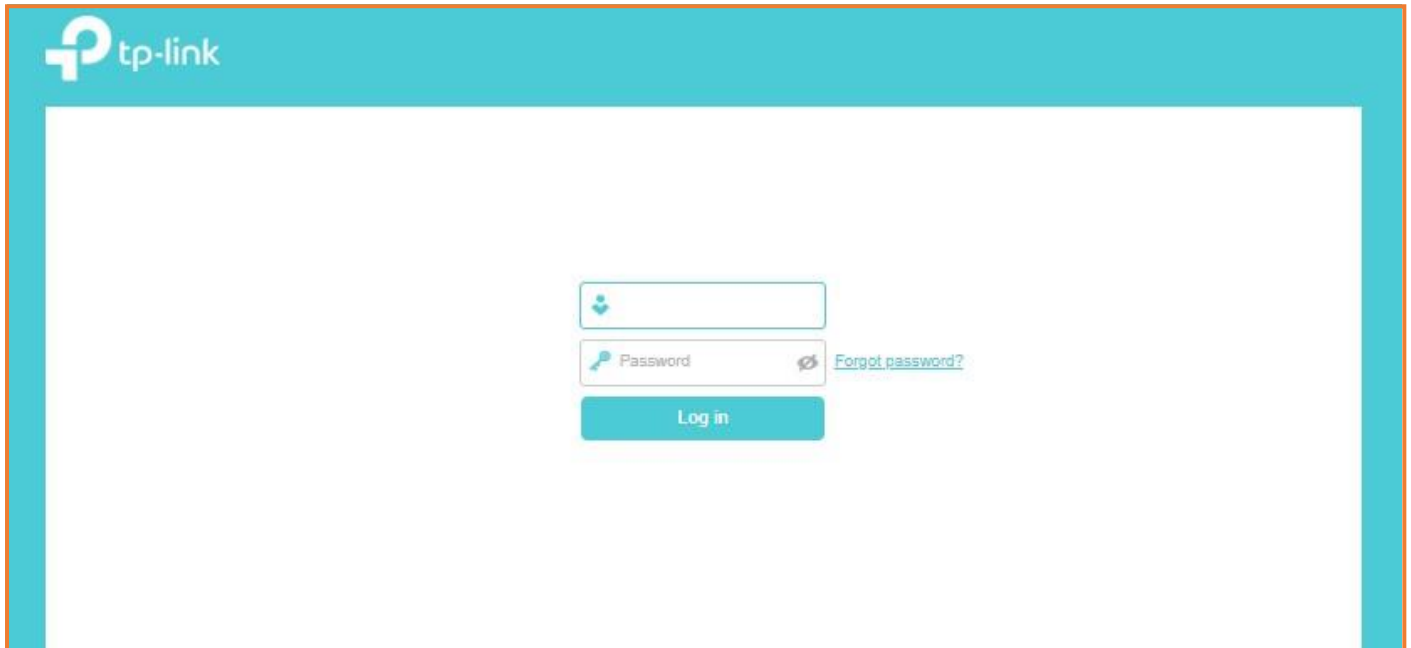

Step 2.


Click on **Advanced**.

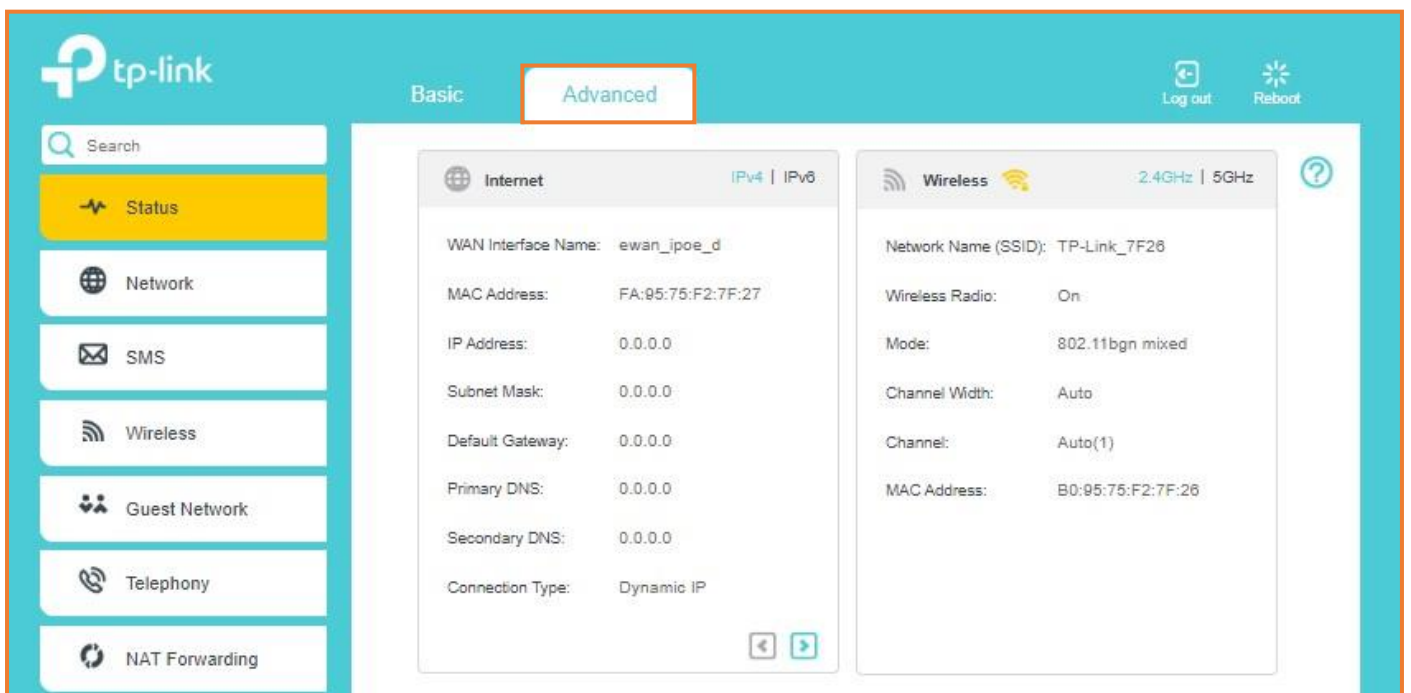


Step 3.
Click on **Networks** > Click on **DSL** > Click on **Delete All**.

Note

(This is to ensure there are no conflicting connections)

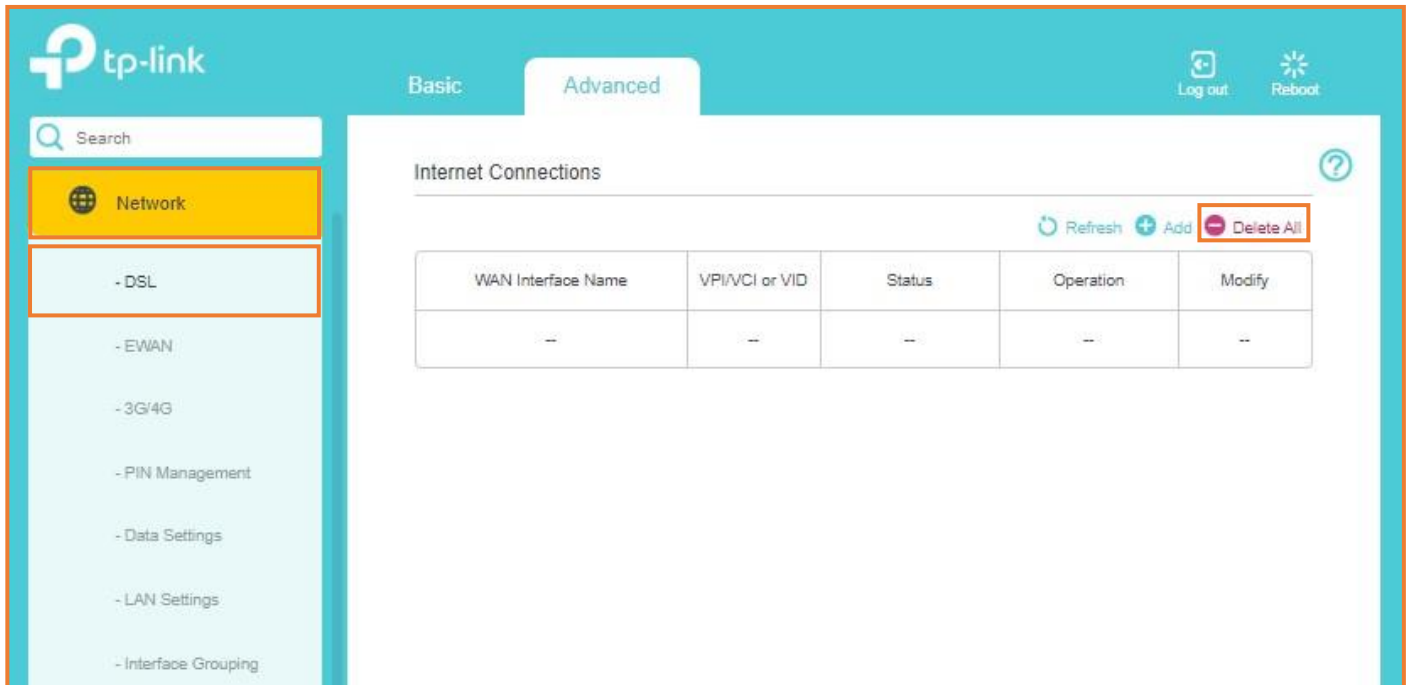


Step 4.
Click on **Add**.

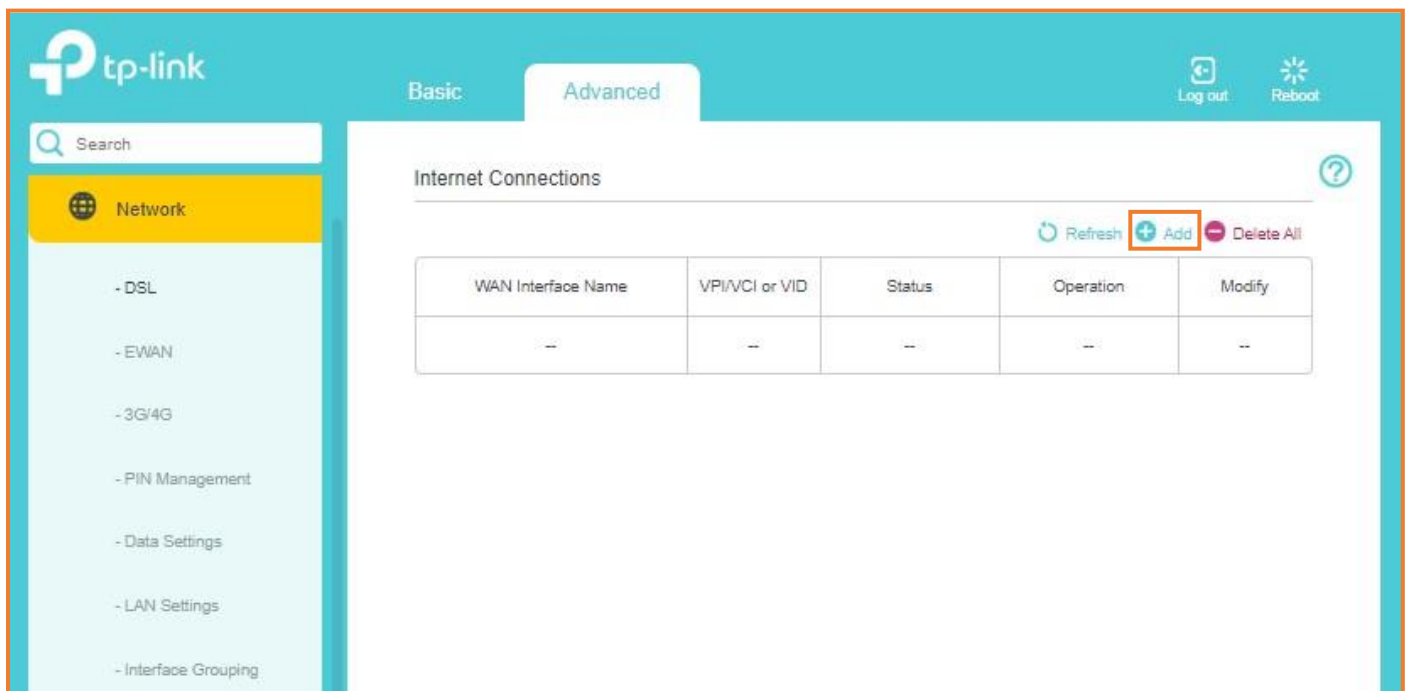

Step 5.
Enter the information provided by FibreMax®.

DSL Modulation Type: **VDSL**
Internet Connection Type: **PPPoE**

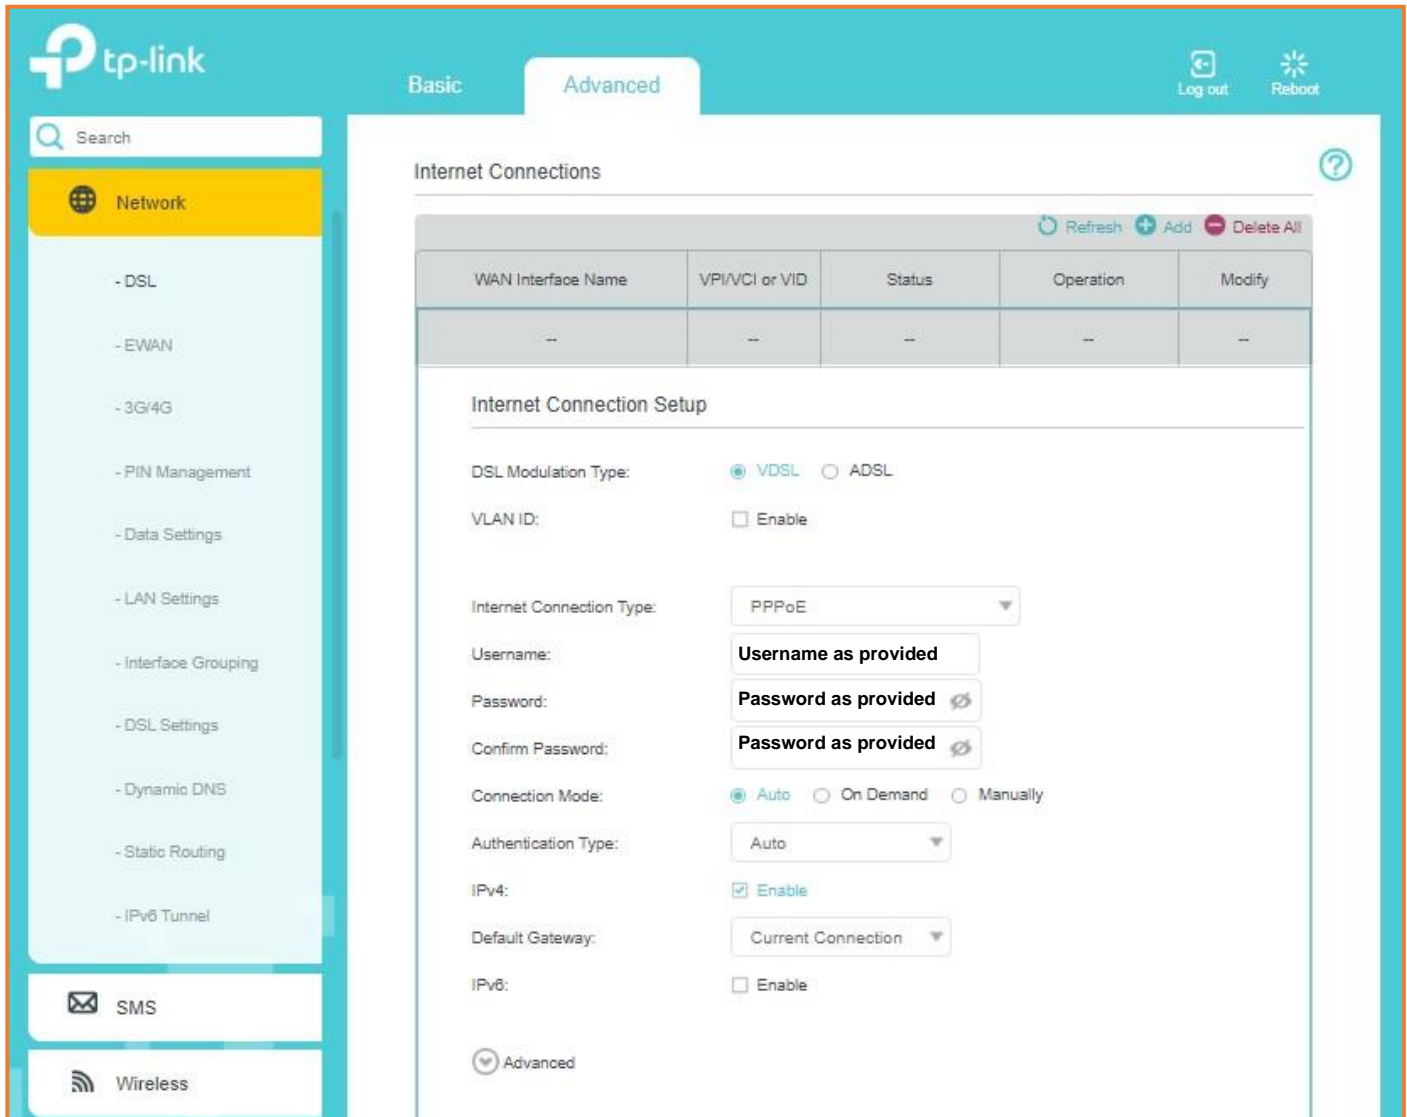

The screenshot shows the TP-Link router's web interface. The 'Advanced' tab is selected, and the 'Internet Connections' section is active. A table at the top shows no existing connections. Below, the 'Internet Connection Setup' section is expanded, showing the following configuration:

- DSL Modulation Type: VDSL ADSL
- VLAN ID: Enable
- Internet Connection Type: PPPoE
- Username: Username as provided
- Password: Password as provided
- Confirm Password: Password as provided
- Connection Mode: Auto On Demand Manually
- Authentication Type: Auto
- IPv4: Enable
- Default Gateway: Current Connection
- IPv6: Enable

The 'Advanced' section is also expanded, showing:

- Clone Current Computer MAC Address
- Use Custom MAC Address

Buttons for 'Cancel' and 'Save' are visible at the bottom right of the configuration area.

Click **Save**.

Finish!